
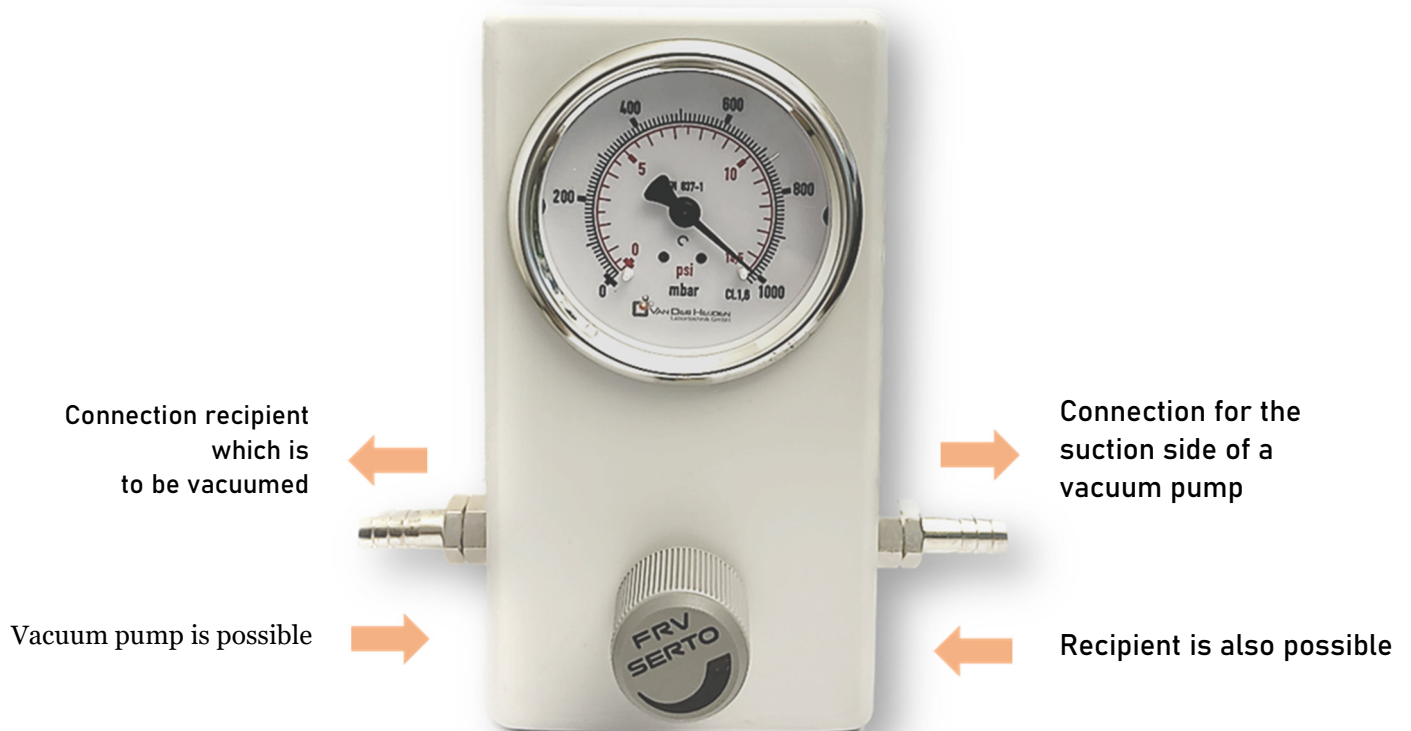


Manual VAC/VAR

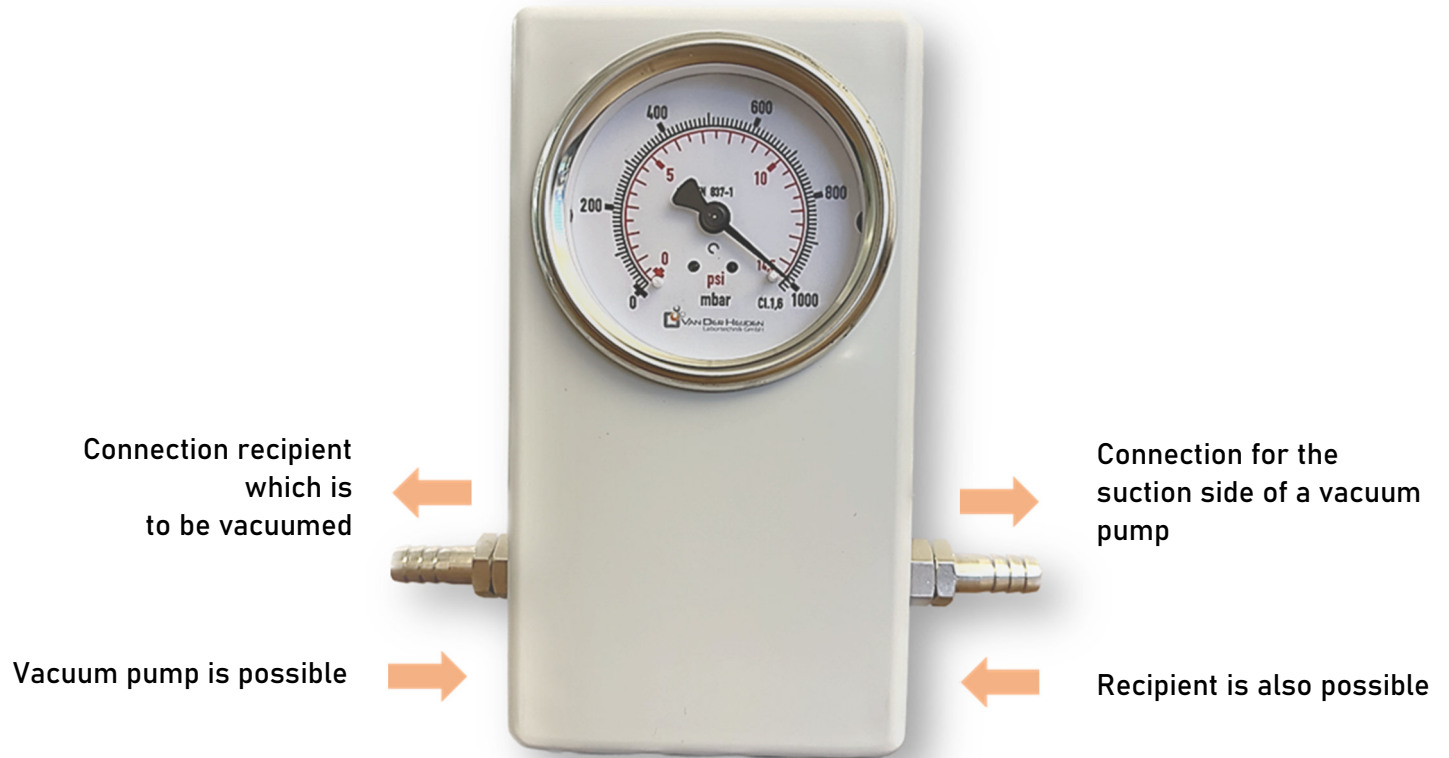

To regulate the vacuum:

Clockwise = better vacuum

Counterclockwise = bad vacuum